

Congratulations on your new S-Wave Curtains from Wonderlux!

Welcome to our simple guide to getting them installed. Your custom curtain pack is straightforward and easy to use, so you'll be enjoying your new curtain treatment in no time.


It's important to know what you're drilling into. If you're not sure what material your wall is, get in touch with us before you start.

- If you're drilling into **wood**, follow the steps as they are laid out below.
- If you're drilling into **plaster**, use the stud finder to locate the studs in your wall, then follow the steps below as usual.
- If you're drilling into **concrete**, stone, or brick, follow the steps below but remember to use a Masonry drill bit and the appropriate anchors and screws.


What You'll Need:

- Pen
- Tape measure
- A small cordless drill
- A Phillips head screwdriver
- A stud finder
- Eye protection
- A friend to help you
- 8. 5-10 minutes

Your Curtain Kit:

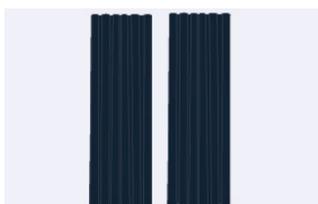

1. Curtain panels

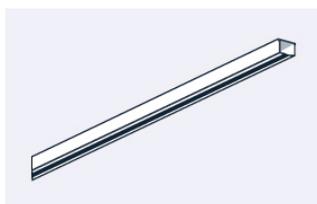


2. Curtain Track
(At the specific length ordered)




3. Curtain track joiner
(If applicable)
(At the specific length ordered)




4. Curtain wand

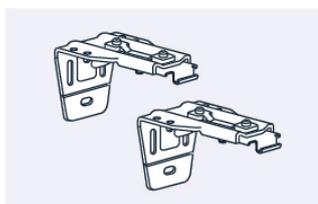

5. Brackets
(face fit only)

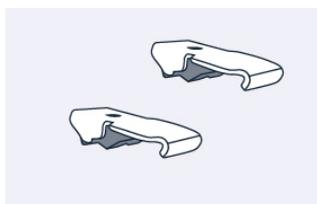

6. Brackets
(ceiling mount only)

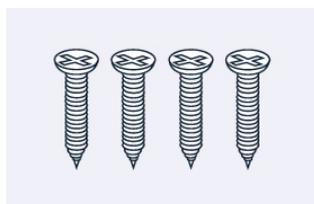

7. Screws




8. For S fold curtains
Spare pendants

Installation:


Okay, time for the fun part. Let's take it slow.

A). Face Mount - Onto Your Wall

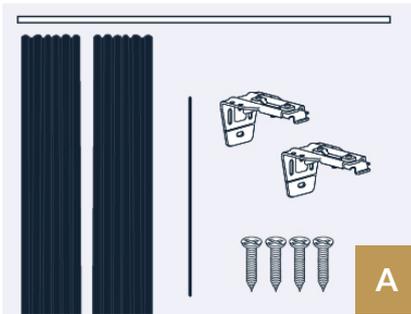

A. Set out your gear:

Unpack your curtain kit, and lay it all out on a flat surface where you can easily find each component.

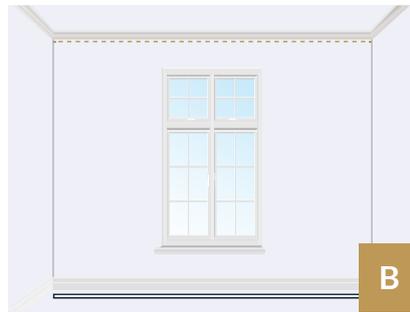

B. Lay your track near the window to check that it is the correct width. If you are using 2 or more pieces of track, lay your track joiners on the floor and slot the ends of two tracks into it so that they click together in the middle.



C. Check how many brackets you need for your track width. Lay each bracket next to your track. Try to keep them roughly 600mm/24 inches apart - that's the standard distance between wall studs.


2. Find your wall studs:




Your brackets are going to screw into your wall studs, so slide your stud finder along the wall to find them. Make a pencil mark on each stud at the exact height you want your curtains to start. Check back to the original height measurement you took if you need to.

- Screwing into concrete, stone or brick? You can disregard this step and start screwing in your brackets.


3. Screw in your brackets:

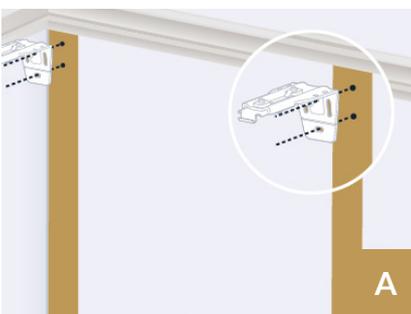

A. Position each bracket in line with the pencil marks on your ceiling joist. Mark the exact screw holes with a pencil.

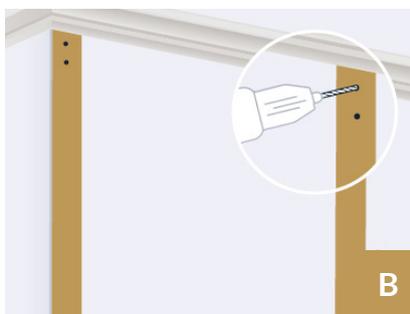


B. Put on your protective eyewear and pick up the cordless drill. Using the 3mm bit, drill each hole. Use short bursts to make a pilot hole. Once you start seeing wood shavings, you know you're drilling into the wall stud and you can drill in further.

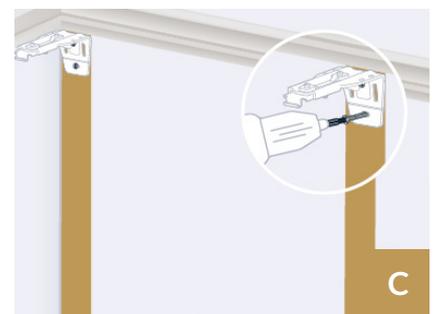


C. Screw your brackets into the wall using your screwdriver, and make sure they're tight with the cordless drill.

4. Click in your track:

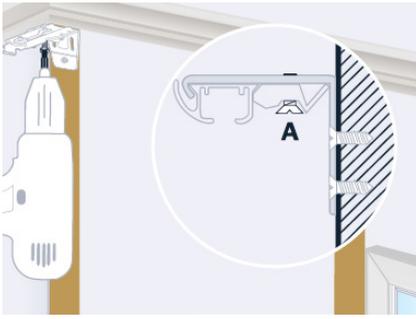


Loosen the screw in the protruding arm of each curtain bracket.

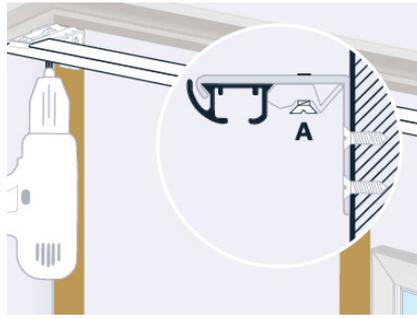

Pick up your track and click it into each bracket. Tighten the screws in the protruding arm of each curtain bracket to fix the track into position. Then check that the track is secure at all points.

5. Click in your curtains

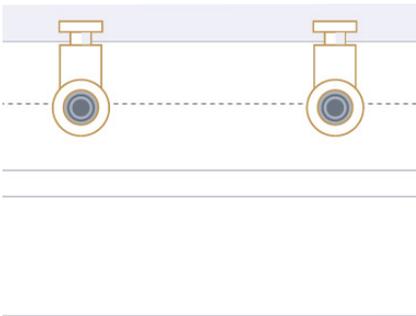

Check the top of your curtain panels and make sure they have a hook or pendant attached to each press stud.



Simply click each pendant of the curtain panel onto the track.

6. Make your S-Wave:



Time to give your curtains perfect S folds! Because your S fold fabric is structured, you only have to dress the curtain once. Start at the top, and ensure that the heading curves around the bracket in the shape of an S.


You can then work downwards, moving from one side of the curtain to the other, gathering the folds to make sure that each S fold carries through when the curtains are drawn open.



Congratulations, you did it - and all on your own, too!


Now it's time to sit back and admire your handiwork, and get ready to make some quality memories in your stylish new living space.

B). Top Mount - Onto Your Ceiling

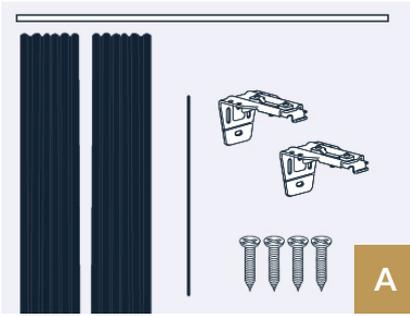

A. Set out your gear:

Unpack your curtain kit, and lay it all out on a flat surface where you can easily find each component.

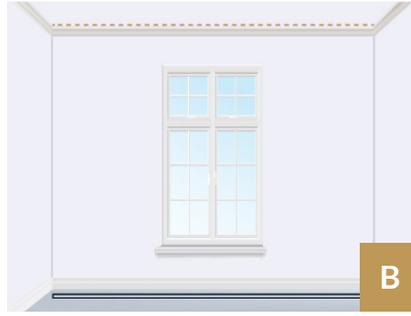


B. Lay your track near the window to check that it is the correct width. If you are using 2 or more pieces of track, lay your track joiners on the floor and slot the ends of two tracks into it so that they click together in the middle.



C. Check how many brackets you need for your track width. Lay each bracket next to your track. Try to keep each one roughly 600mm/24 inches apart - that's the standard distance between ceiling joists.


2. Find your ceiling joists

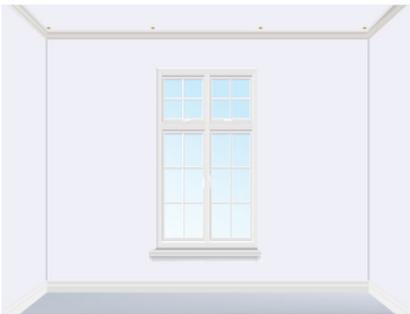


Your brackets are going to screw into your ceiling joists, so slide your stud finder along the ceiling to find them. Make a pencil mark on each joist, and make sure that they are at least 35mm out from the wall, so as to clear any window frames or roller blinds that protrude out. These marks will line up with the back of your curtain brackets.

- Screwing into concrete, stone or brick? You can disregard this step and start screwing in your brackets.

3. Screw in your brackets:

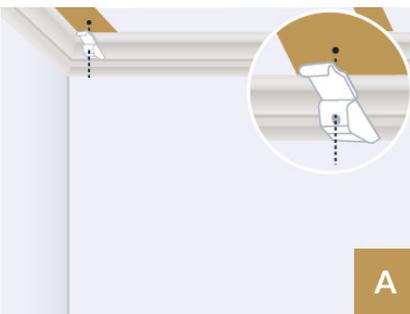

A. Position each bracket in line with the pencil marks on your ceiling joist. Mark the exact screw holes with a pencil.

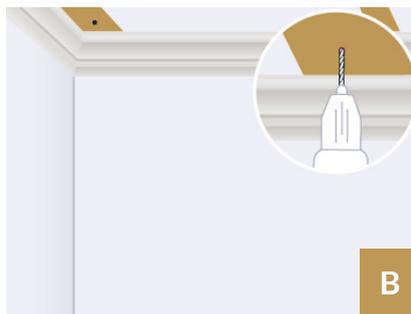


B. Put on your protective eyewear and pick up the cordless drill. Using the 3mm bit, drill each hole. Use shorts bursts to make a pilot hole. Once you start seeing wood shavings, you know you're drilling into the joist and you can drill in further.




C. Screw your brackets into the wall using your screwdriver. Don't make them too tight just yet - we want to click the track in first before doing that.

4. Click in your track:

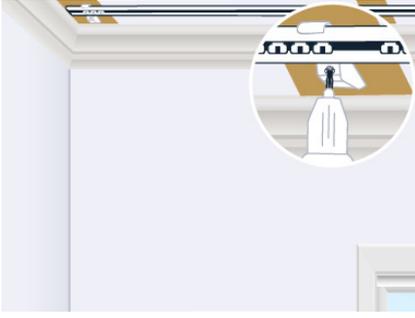

Pick up your track and click it into each bracket. Tighten the screws in each curtain bracket with the cordless drill, fixing the track into position. Then check that the track is secure at all points.

5. Click in your curtains

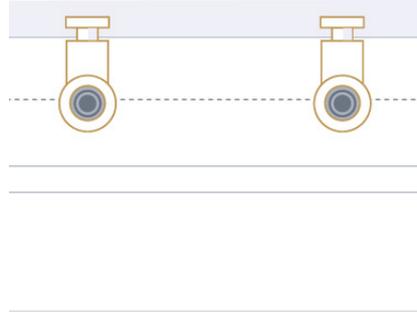

Check the top of your curtain panels and make sure they have a hook or pendant attached to each press stud.



Simply click each pendant of the curtain panel onto the track.

6. Make your S-Wave:



Time to give your curtains perfect S folds! Because your S fold fabric is structured, you only have to dress the curtain once. Start at the top, and ensure that the heading curves around the bracket in the shape of an S.

You can then work downwards, moving from one side of the curtain to the other, gathering the folds to make sure that each S fold carries through when the curtains are drawn open.



Congratulations, you did it - and all on your own, too!

Now it's time to sit back and admire your handiwork, and get ready to make some quality memories in your stylish new living space.

Troubleshooting/Hints & Tips

My curtains have lost their S fold

To help your curtains regain their shape, draw the curtains open as wide as they can go. Starting at the top (you may need a ladder), use your fingers to gather S folds that align to those created in your curtain heading at the top, near the bracket. Leave the curtain drawn open for a couple of hours afterwards so that the fabric can remember the new folds.

My curtains are getting stuck when I pull them open

Open your curtains as wide as they can go, and apply a thin layer of silicon spray onto the tracks where the pendants slide across. Be careful not to get any on the curtain fabric itself.

How do I clean my curtains?

How you go about this depends on the fabric of the curtain. Always check the label for specific fabric care guidelines before machine washing or dry cleaning.